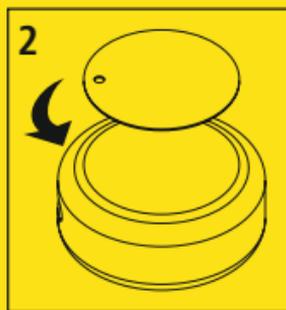
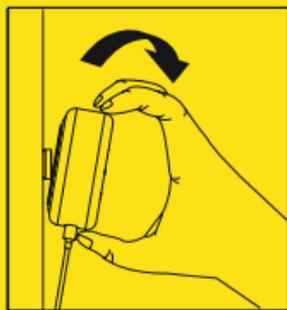


A**GB Instructions for use**

- Remove the film from the metal plate.
- Stick the metal plate to the back of the Echo Dot.
- Please note that the adhesive surface should be free of dust and grease. Use a suitable cleaning agent from a specialised dealer to clean the surface.
- After attaching the metal plate, wait 4 hours for the adhesive to completely set before attaching the Echo Dot to the magnet.

D Anwendungshinweis

- Entfernen Sie die Folie der Metallplatte.
- Kleben Sie die Metallplatte auf die Rückseite des Echo Dot.
- Beachten Sie, dass die Klebefläche staub- und fettfrei sein muss. Verwenden Sie dazu einen geeigneten Reiniger aus dem Fachhandel.
- Warten Sie nach der Anbringung der Metallplatte 4 Stunden bis der Kleber vollständig ausgehärtet ist, bevor Sie den Echo Dot am Magneten befestigen.

B**GB Note**

Detach the Echo Dot from the magnet by pulling it away diagonally downwards/upwards.

D Hinweis

Trennen Sie den Echo Dot vom Magneten, indem Sie ihn schräg nach unten/oben wegziehen.